

ROUGH COUNTRY

SUSPENSION SYSTEMS®

FORD 2021-22 Bronco Overhead Molle Panel

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

Kit Contents:


- Overhead Molle Panel x1
- Molle Crossmember x1
- Dr Side Mounting Bracket x1

Tools Needed:

- T40 Torx Bit
- 4mm Allen Wrench
- 8mm Socket/Wrench
- 10mm Socket/

Hardware Included:


- 6mm x 20mm Button Head Bolts x8
- 6mm Flat Washers x8
- 6mm Lock Nuts x8

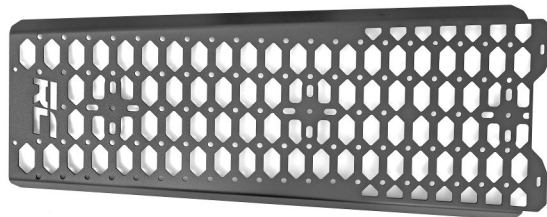

51123



51124

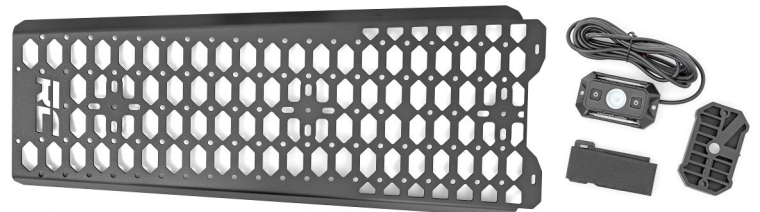


Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





INSTALLATION INSTRUCTIONS



1. Remove the roof prior to install and pull the front upper trim down using a trim remove tool. **See Photo 1.**
2. Trim the plastic lip above the overhead switch panel using a saw and sand smooth. **See Photo 2 and Photo 3.**

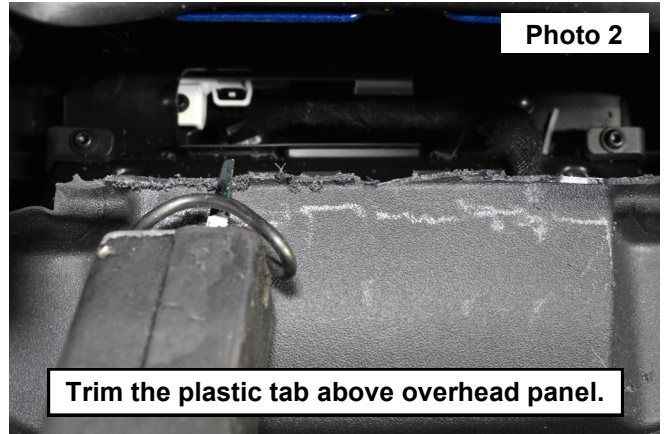

3. Remove stock bolts from above the overhead switch panel using a T40 Torx bit and install the front bracket with the stock bolts. **See Photo 4 and Photo 5.**

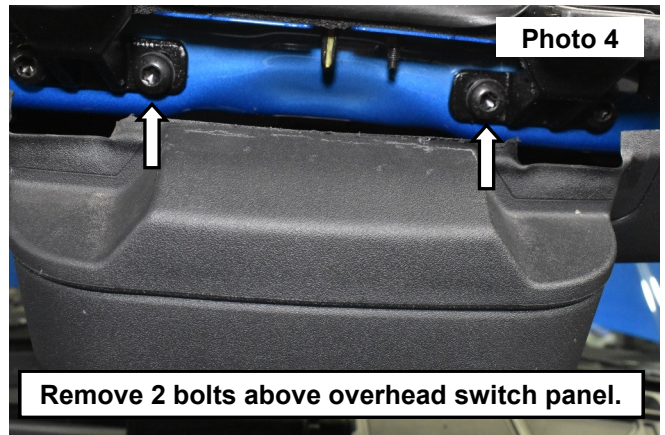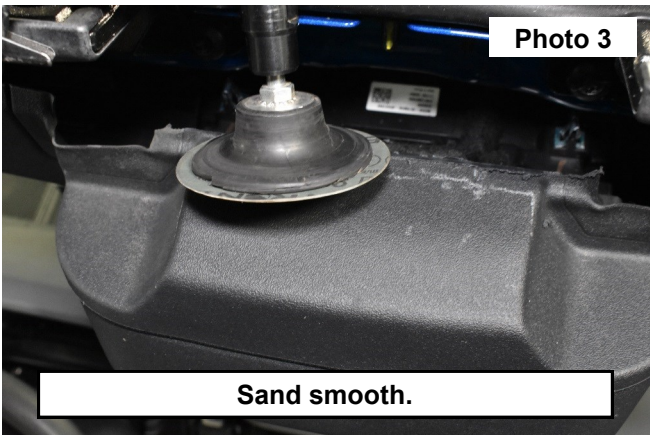



4. Remove the stock bolts from the frame above the Dr/Pass seats using an 8mm socket/wrench. **See Photo 6.**

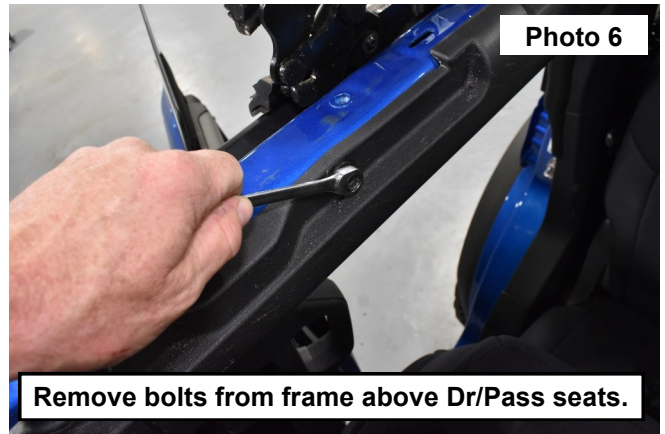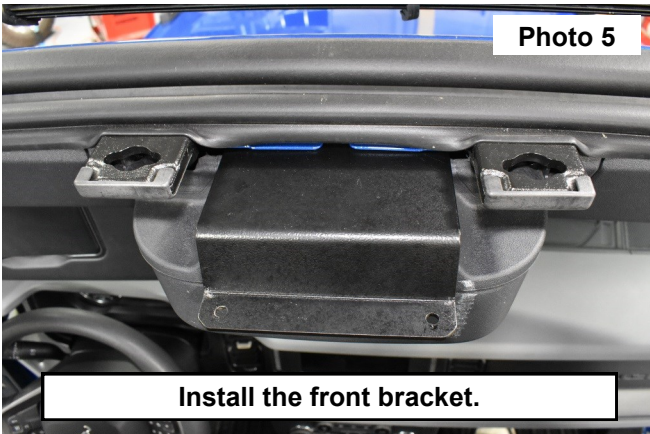

5. Install the Dr/Pass side mounting brackets using the stock hardware. **See Photo 7.**
6. Install the Molle crossmember between the Dr/Pass mounting brackets with the supplied 6mm hardware using a 4mm Allen wrench and 10mm socket/wrench. **See Photo 8.**





7. Install the overhead Molle panel between the crossmember and front mounting bracket with the supplied 6mm hardware. **See Photo 9 and Photo 10.**

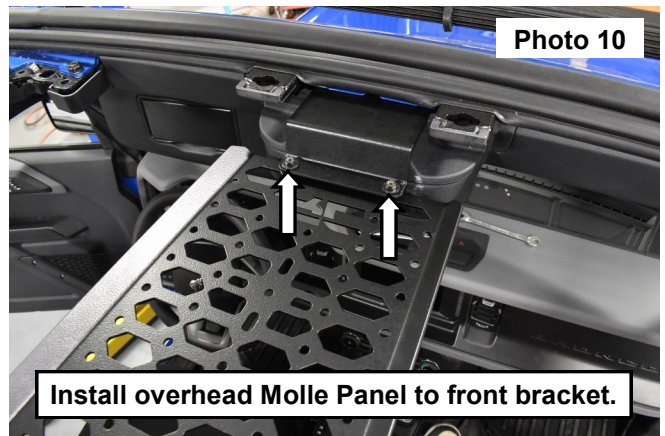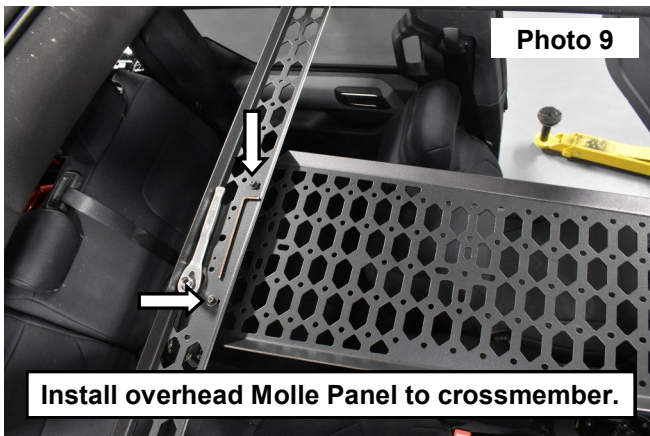

8. Install the supplied dome lights in the molle panel using the hardware supplied with the lights. **See Photo 9.**
9. Run the wiring to the battery along the desired route.

⚠ WARNING If you remove any of the paneling marked with "Airbag" to conceal the wiring, unplug the battery and check your service manual to remove the fuses for the airbags. **See Photo 10.**

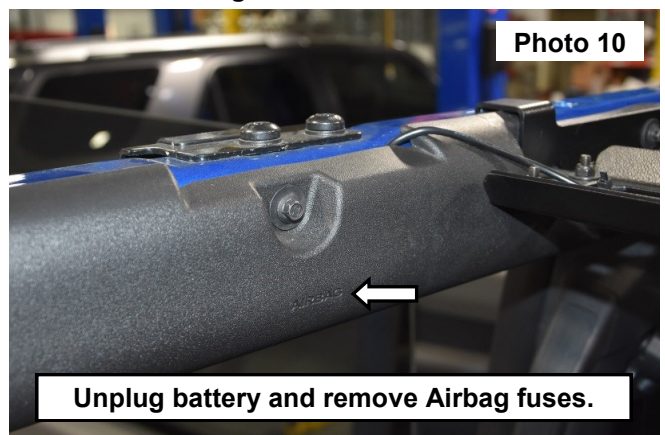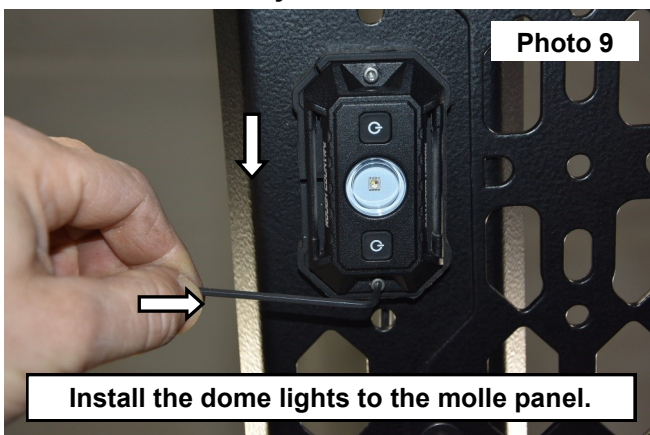

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

