

### FORD 2021 BRONCO 2DR REAR WINDOW MOLLE PANEL

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

**▲ NOTICE** This kit is only compatible with the two door version of the Bronco.

**▲ NOTICE** This kit will require the removal of the roof to install.

**KIT CONTENTS:**


- Rear Window MOLLE Panel x2
- Top Center Mount x2
- Top Cage Bracket x2
- L-Bracket x6

**HARDWARE INCLUDED:**

- 6mm x 20mm Button Head Bolt x12
- 6mm Body Clip x12
- 8mm x 20mm Button Head Bolt x6
- 8mm Flat Washer x6

**TOOLS NEEDED:**

- 4mm Allen Wrench
- 5mm Allen Wrench
- T50 Bit
- T47 Bit
- T45 Bit

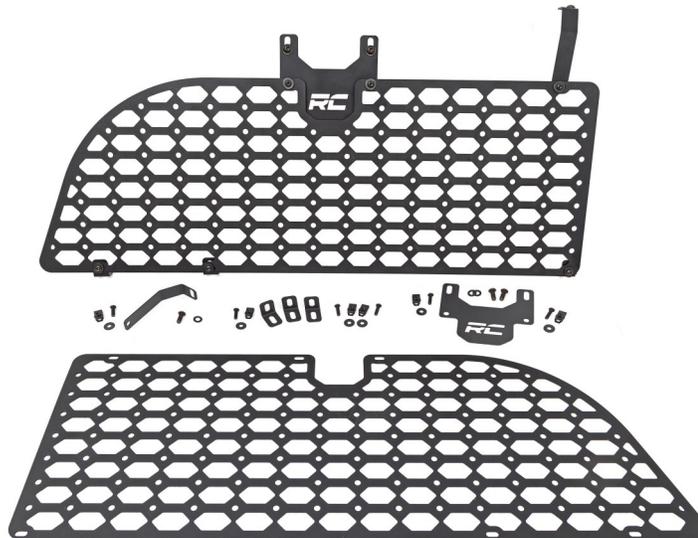


**Torque Specs:**

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs




## INSTALLATION INSTRUCTIONS


1. Remove top of vehicle with T45, T47, and T50 bits. Vehicle should come with tools to remove the top.
2. Use supplied 6mm bolt, washer, and body clip to attach top cage bracket to the MOLLE panel. Tighten with 4mm Allen Wrench. **See Photo 1 and Photo 2.** **NOTE:** The protrusion of the body clip will face to the inside of the vehicle.

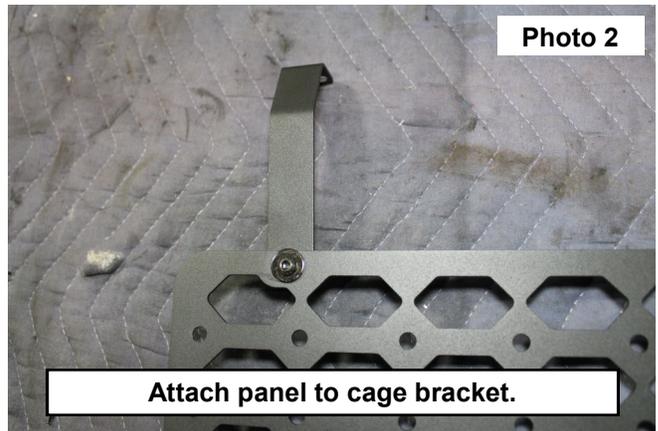


3. Use two (2) of the supplied 6mm bolts, washers, and body clips to attach the top center mount to the MOLLE panel. Orient body clip like Step 2. Tighten with a 4mm Allen wrench. **See Photo 3.**
4. Attach cage bracket and center mount to the roll cage with supplied 8mm bolts and washers. **See Photo 4 and Photo 5.**

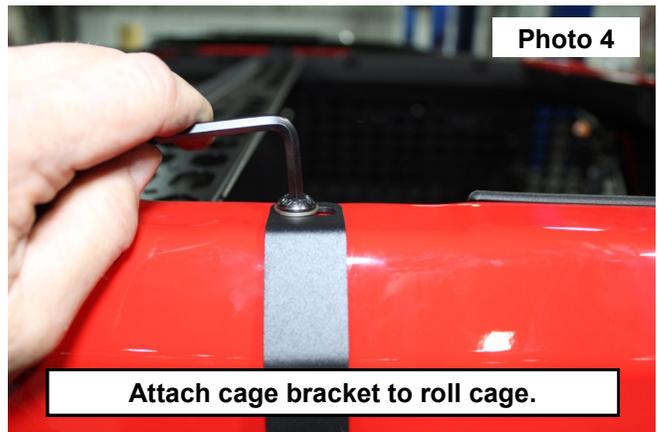

5. Repeat previous steps for other side of vehicle.
6. Place roof back on vehicle. Before securing the roof to the vehicle frame, install the L-brackets on both sides of the vehicle. Once L-brackets are installed, secure the roof to the vehicle. **See Photo 6.**

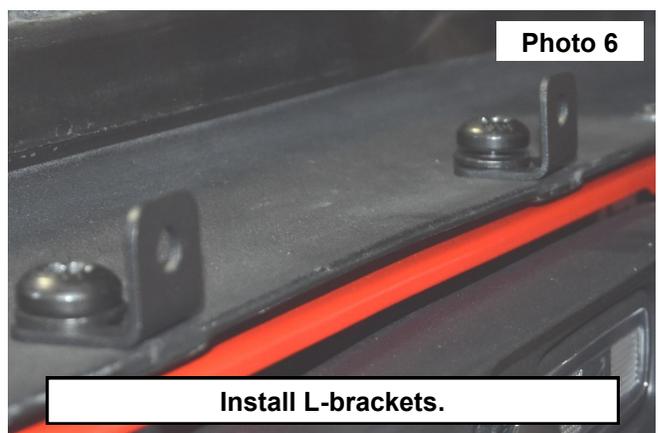

7. Install remaining supplied 6mm body clips into the L-brackets with the protrusion oriented to the outside of the vehicle. **See Photo 7.** Use supplied 6mm bolts to fasten the panels to the L-brackets. **See Photo 8.**

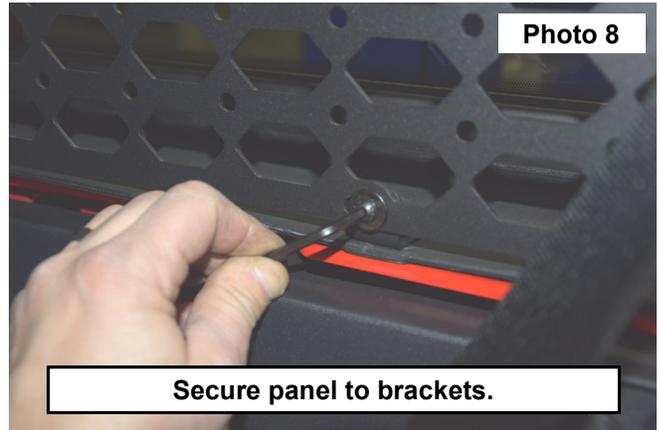

**▲ NOTICE** In order to remove the roof again, the L-brackets and accompanying hardware will need to be removed. With the roof off, hardware can be reinstalled with all bolt heads facing out.



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

