



JEEP JK LIGHT BRACKETS

Thank you for choosing Rough Country for all your suspension needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.


▲ Notice Designed to fit Rough Country 50" Cree LED light bar kit. Compatible with other 50" aftermarket lights measuring between 49.80 - 50.80

TOOLS NEEDED
T-40 WRENCH
6mm Allen Wrench

KIT CONTENTS
Rubber (2)
Dr and Pass Bracket (1 each)
8MM Stainless Button Head bolts (10)

INSTALLATION INSTRUCTIONS

1. Remove the factory hardware, (5) per side, as shown **(Photo 1)** using a T-40 wrench.
2. Remove adhesive backing from rubber gasket. Align holes in gasket with inside of bracket. Firmly press gasket into inside of light bracket. **Rubber gasket should be between light bracket and vehicle body.**
3. Align the bracket and rubber to pillar and using the supplied hardware using a 6mm allen wrench. Hand tighten. **See Photo 2.**

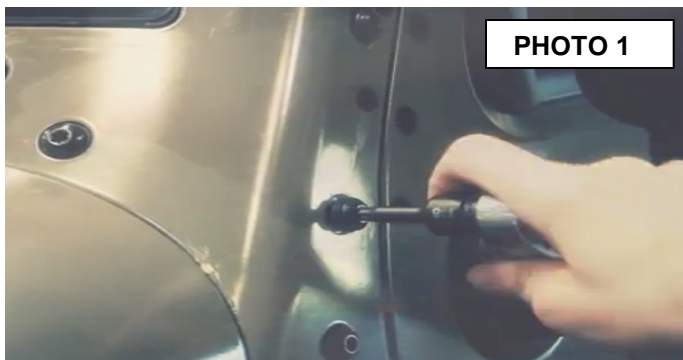

4. Repeat steps for other side of vehicle.
5. Using a lock washer and 8mm bolt provided with purchase of light, install light as shown in **Photo 3** using 6mm wrench provided.



6. After light is installed, tighten all hardware.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

Thank You for choosing Rough Country for your off road needs!!!