

# ROUGH COUNTRY

## SUSPENSION SYSTEMS®

921RCT2480CC

### Toyota 2024 TACOMA Crew Cab Nerf Step

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

#### Kit Contents:

Driver Side Bumper Step x1  
Pass Side Step x1  
Driver Front Bracket x1  
Driver Center Bracket x1  
Driver Rear Bracket x1  
Passenger Front Bracket x1  
Passenger Center Bracket x1  
Passenger Rear Bracket x1

#### Tools Needed:

12mm Wrench or Socket  
13mm Wrench or Socket

#### Hardware Included:

8mm x 20 Hex Head Bolt x12  
8mm Flat Washer x12  
8mm Flange Nut x12  
Round End Cap x2  
Flat End Cap x2





#### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





## INSTALLATION INSTRUCTIONS



1. Remove all OE bolts from the mounting surface under the cab of the vehicle using a 12mm socket.
2. Locate the (3) mounting brackets. Notches at the bottom of the bracket indicate front, center and rear. **See Photo 1.**
3. Place the driver front mounting bracket to the bottom side of the cab. Note the bend will be toward the rear of the vehicle. Secure the front mounting bracket using (2) of the retained OE bolts. Do not tighten at this time. **See Photo 2.**

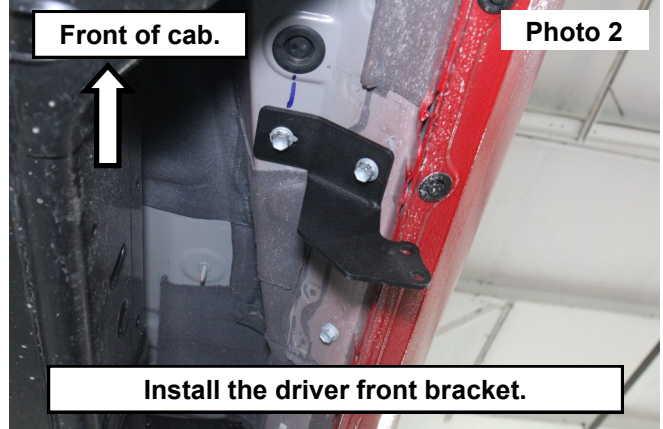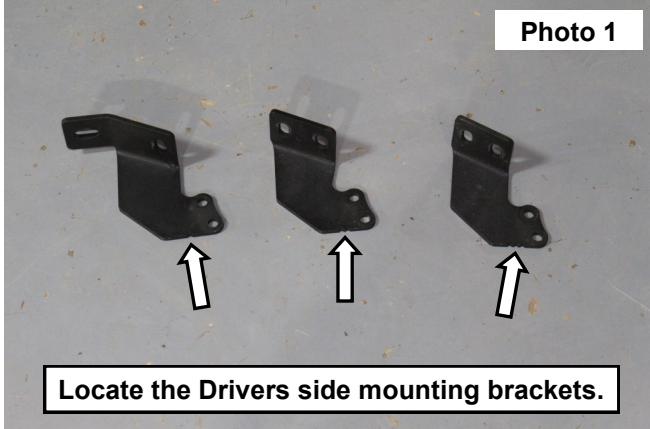



4. Install the center and rear mounting bracket to the bottom side of the cab. Note the bend will be toward the rear of the vehicle. Secure the center and rear mounting brackets using (2) of the retained OE bolts. Do not tighten at this time. **See Photo 3.**
5. Brackets shown installed onto the cab. Note: Brackets should be snug to the cab of the vehicle. Each bracket should be allowed to move for mounting the step. **See Photo 4.**

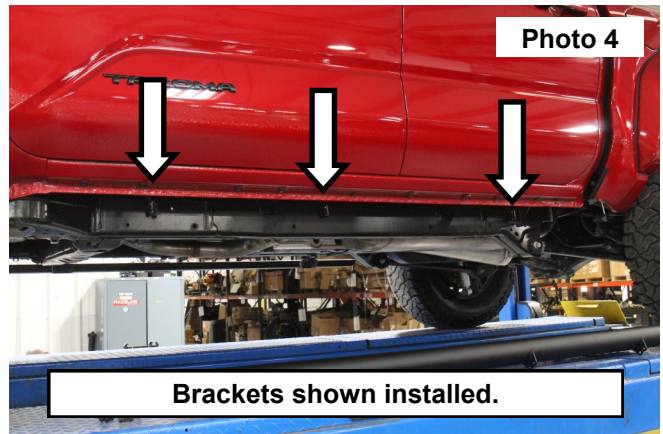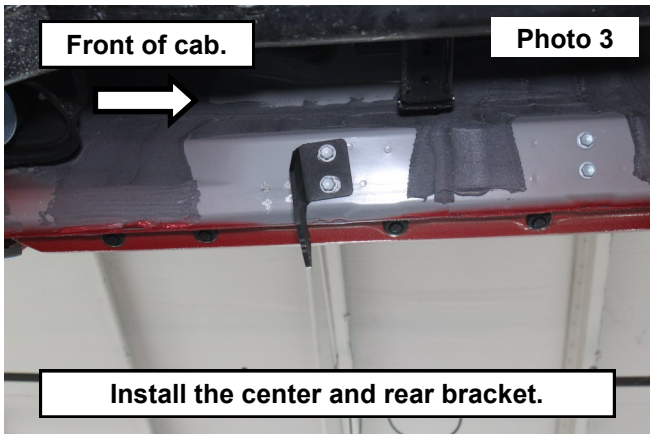



6. Install the tab on the step to the front side of the cab mounting brackets using (2) 8mm x 20mm hex head bolts, (2) 8mm flat washers and (2) 8mm flange lock nuts. Snug the bolts using a 13mm wrench and socket. **See Photo 5.**
7. Tighten all (3) of the cab brackets using a 12mm socket. **See Photo 6.**

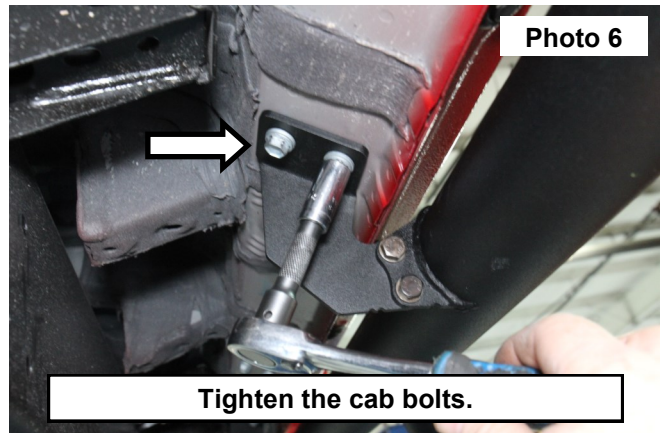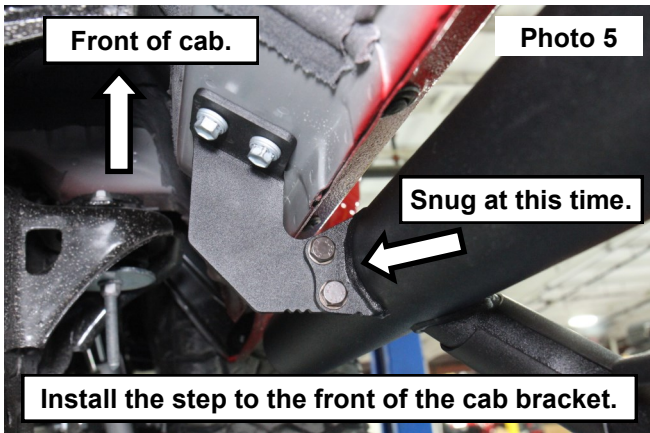


8. Tighten each of the step mount bolts for the front, center and rear using a 13mm socket and wrench. **See Photos 7 and 8.**

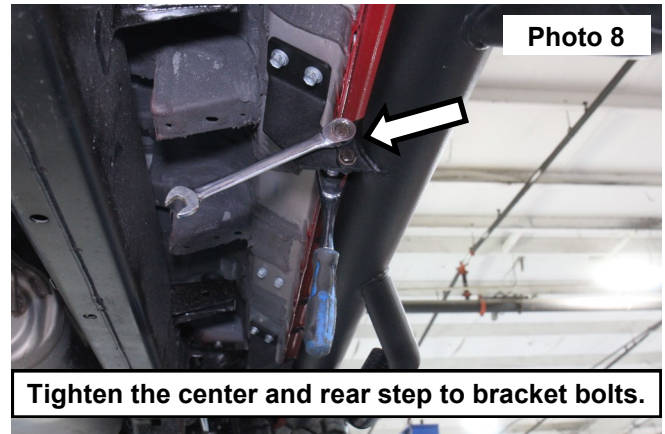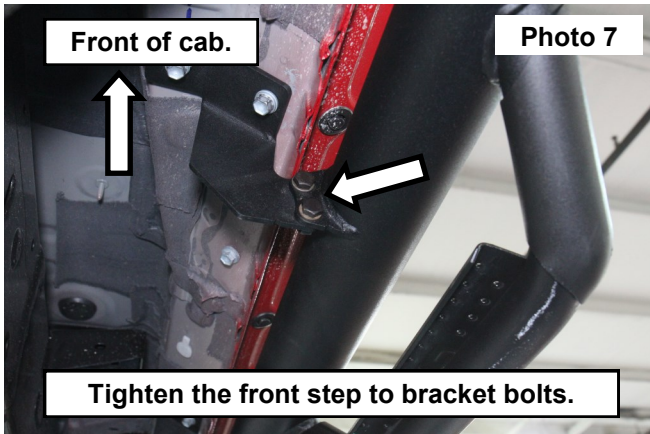

9. Install the round end cap onto the front of the drivers side step. **See Photo 9.**  
10. Install the flat end cap onto the rear of the drivers side step. **See Photo 10.**

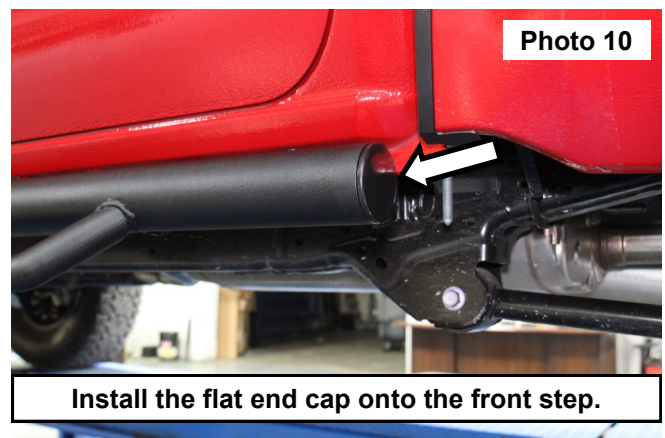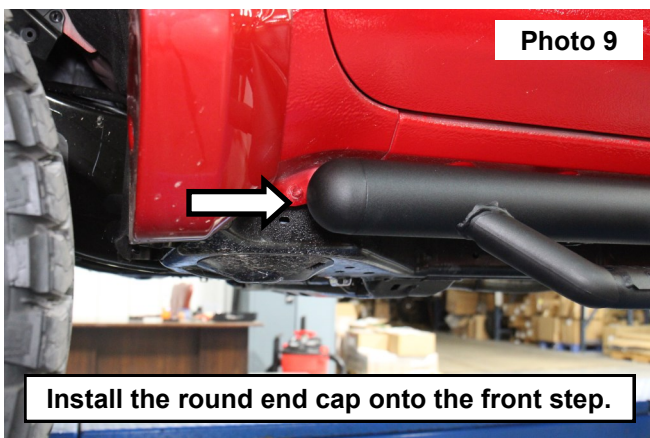

11. Ensure that the step is fully tightened, flat and center of the cab before use of the step. **See Photo 11.**

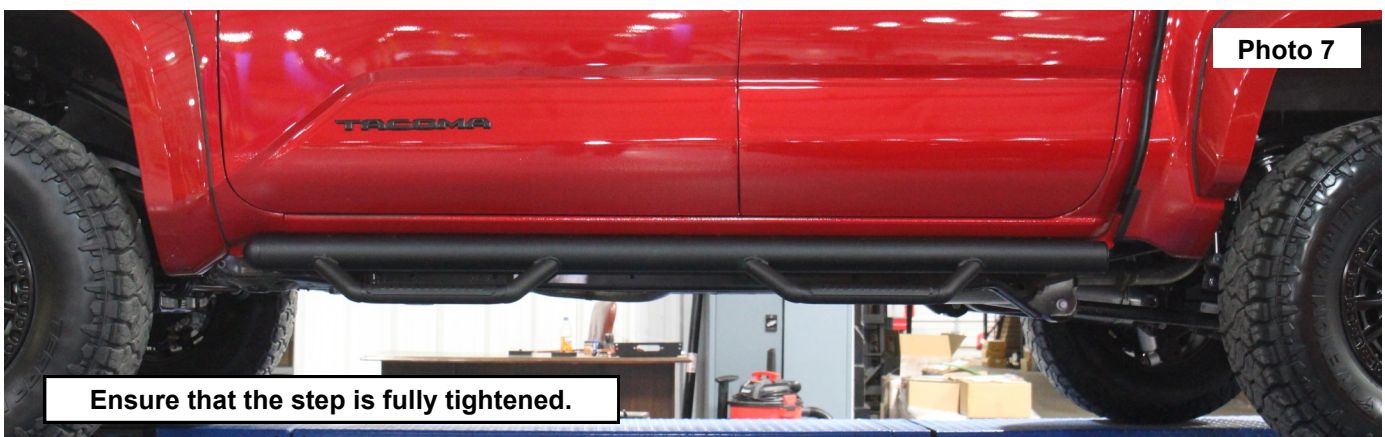

12. Repeat steps 1-11 on the opposite side of the vehicle.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.



