

ROUGH COUNTRY

SUSPENSION SYSTEMS®

NISSAN 2004-23 TITAN CREW CAB HD2 STEP

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

KIT CONTENTS:

Step Rails x2
Dr. Step Bracket x3
Pass. Step Bracket x3
Front End Cap x2
Rear End Cap x2
Tread Plate x4

TOOLS NEEDED:

10mm Wrench or Socket
13mm Wrench or Socket

HARDWARE INCLUDED:

12 - 8mm Lock Washer
12 - 8mm Oversize Washer
12 - 8mm x 25mm Bolt
12 - 6mm Flat Washer
12 - 6mm Lock Nut
12 - 6mm x 20mm Bolt
8 - 6mm Lock Washer
8 - 6mm x 15mm Button Head Bolt
8 - 6mm Nut
24 - 8mm Self Threading Nut




Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





HD2 BOARD ASSEMBLY

1. Place molded tread plate onto the running board by aligning the pegs with the holes in the step board. **See Photo 1.**
2. Secure the tread plate to the step board using a 13mm socket. **See Photo 2.**

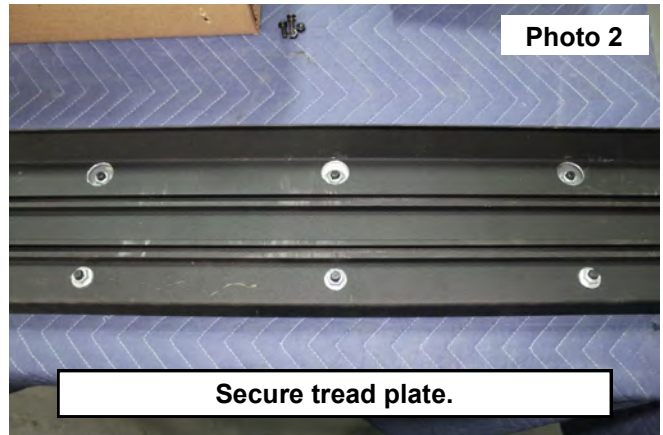


3. Place (2) 6mm nuts into the track on the underside of the step board. **See Photo 3.**
4. Use (2) supplied 6mm lock washers and button head bolts to secure the endcap to the step board. Tighten with a 4mm Allen wrench. **See Photo 4.**

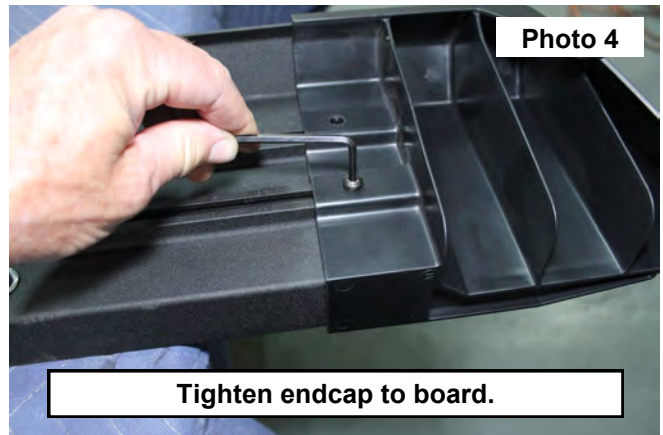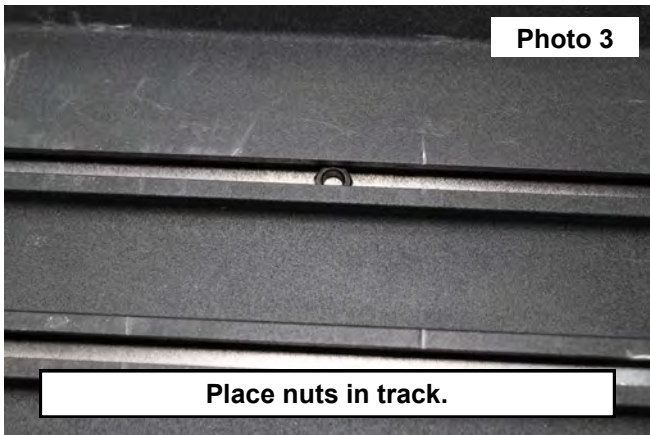


5. Slide (2) 6mm x 18mm bolts into each track on the step board.
6. For each bracket, slide a supplied 6mm x 20mm bolt into each track.
7. Repeat Step 4 to install the other end cap.

INSTALLATION INSTRUCTIONS

1. Locate the step mounting holes in the rocker panel of the vehicle. If needed, pull plugs out. **See Photo 1.**
2. Install the brackets in the mounting holes using supplied (2) 8mm x 25mm bolts, oversize washers, and lock washers. Tighten with a 13mm wrench. **See Photo 2.**

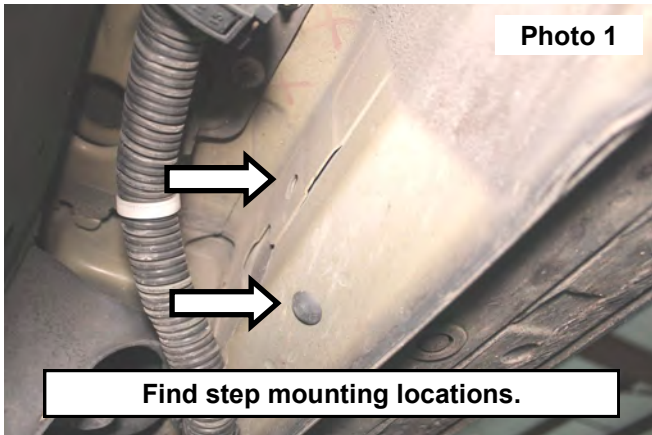

3. Align the bolts in the track of the assembled step boards with the slots of the brackets. Use the supplied 6mm washer and lock nut to secure. Use a 10mm wrench to tighten. **See Photo 3.**

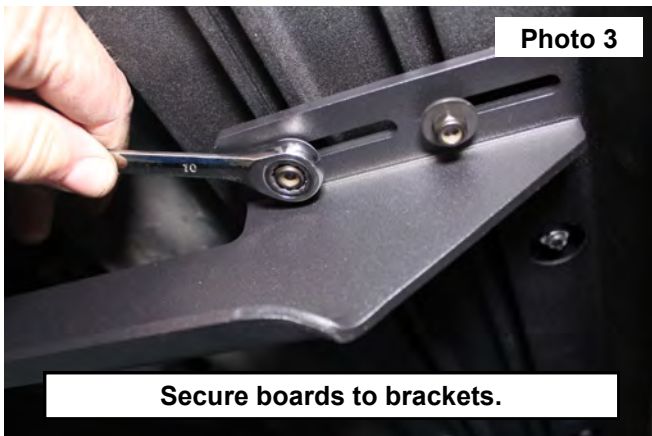

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

