

WARNING: This product contains a chemical known to the State of California to cause Cancer and Reproductive Harm. For more information, go to **www.P65Warnings.ca.gov.**

2019-2024 JEEP JL 2 & 4 DOOR TAILGATE PROTECTOR

PRIOR TO INSTALLATION

- A) Install the parts according to these written instructions with the hardware provided. WARNING: Failure to install according to these instructions will invalidate the warranty. This includes, but is not limited to, using alternative installation methods, hardware, or materials. DO NOT USE: Loctite, Superglue, or similar products on the hardware or the flares. Install parts on cleaned vehicle surfaces.
- B) **Fit:** Verify the fit of the parts to vehicle prior to installation (some filing, sanding, or cutting may be necessary to ensure proper fit).
- C) Painting: (Optional) if paint is desired it must be done prior to installing parts on vehicle. Clean outer surface with a good grade degreaser. DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER. Wipe outer surface thoroughly with a tack rag prior to paint. Application of plastic adhesion promoter for TPO plastic as per your paint system manufacturer's recommendations is required. Paint parts using a high-quality enamel, or polyurethane automotive paint.
- D) **Metal Protection:** All exposed fasteners and bare metal should be treated with rust resistant paint BEFORE installing parts
- E) **Decals:** Parts may interfere with existing decals on vehicle. If you wish, remove decals prior to installation of parts.
- F) Care & Cleaning: Parts are built to last; any detergent you use to wash your vehicle is sufficient to clean the part. Do not use any harsh abrasive detergents.

TOOLS FOR EASY INSTALLATION:

- Soft Cloth or Alcohol Wipe
- Masking Tape (Optional)
- Sharpie (Optional)

PLEASE READ: Dirt and debris can become lodged between the parts and the vehicle's surface, causing scratching and paint wear from vibration. Manufacturer is not responsible for any damage, and the installation of our parts is done with the buyer's understanding that this scratching and paint wear may occur.

LIMITED LIFETIME WARRANTY AGAINST ANY MANUFACTURING DEFECTS: To claim warranty you must provide Proof of Purchase.

INCLUDED IN HARDWARE KIT:

3.



Alcohol Wipe 1 pc




SECTION 1: TAILGATE PROTECTOR INSTALLATION




Open tailgate. Use supplied alcohol wipe to clean tailgate at areas of tape. NOTE: It may be helpful to remove the spare tire.



Peel 2-3 inches of red tape leader from each piece of tape and fold around to front of part. **NOTE:** It is helpful to use masking tape to hold leader in place on face of part. Use a sharpie to mark leaders per Step 4.

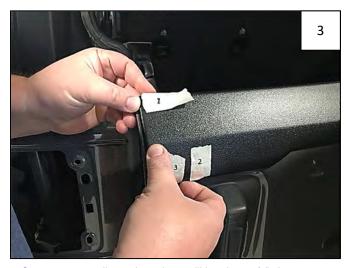

Center part on tailgate rim – there will be about 1/8" clearance at either end. Make sure all red tape leaders are folded out and accessible.

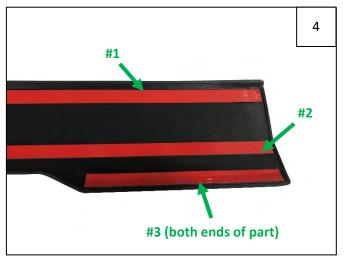

Start with tape leader marked #1 first. Carefully pull red tape leader at a 45-degree angle up away from the part to release from the tape, pressing against part as you go.



After pulling a few inches, press part firmly at area of tape before proceeding, to maintain part position.



Pull rest of tape leaders in numbered order in Step 3. Carefully pull red tape leader at a 45-degree angle away from the part to release from the tape, pressing against part as you go.



Press part against vehicle at areas of tape for 30 seconds to ensure full adhesion. Tape cures after 24 hours at 65 degrees. Curing will take longer in colder temperatures.



Completed Tailgate Protector Installation.

